

Tote-Al Case Carts, Double-door Models (with center posts)

- Durable, heli-arc welded, stainless steel
- Wide selection of shelf and drawer options
- Pick from four cabinet lengths and two heights
- Recessed or external handles

New Model Numbers:105495-00105503-00105541-00105549-00

105511-00 105595-00

105519-00 105603-00 105525-00 105611-00

105533-00 105619-00

Former Model Number: 105619-00

Whee



Form No. 702732 Rev. A 11/06

© Copyright 2006 by Suburban Surgical Co., Inc. All rights reserved.

No part of this document may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system without written permission. Inquiries should be addressed to **Suburban Surgical Co., Inc.** Wheeling, Illinois 60090, USA

Table of Contents

Chapter 1 - General Information	1
Introduction	
About this Manual	
Information and Safety Notices	
Notes	
CAUTIONS	
SSCI Contact Information	
Models	
Cabinet Sizes	
Handle Options	
Model Part Numbers	
Shelf Options	
Top Extensions	
Accessories	
Optional Drawers	
Returning the Case Cart for Repairs	
RMA Numbers	
Packing and Shipment	
Warranty	
Chapter 2 - Unpacking and Assembly General	
Unpacking and Inspection	
Shelf Installation	9
Adjustable Shelves	9
Roll-out Shelves	
Chapter 3 - Using Your Case Cart	13
Opening, Latching, and Closing the Doors	
Opening the Door	
Latching the Door in the Full-open Position	
Unlatching the Door from the Full-open Position	
Closing the Door	
Using Roll-out Shelves	
Locking and Releasing Roll-out Shelves	
Rolling Shelves In and Out	
Removing and Replacing Roll-out Shelves	
Removal	
Replacement	

	Adjusting Shelf Height	
	Adjustable Shelves	
	Roll-out Shelves	
	Removing and Replacing Shelves	
	Adjustable Shelves	
	Roll-out Shelves	
	Using the Caster Swivel Locks	
	Locking the Swivel	
	Unlocking the Swivel	
Ch	apter 4 - Repairs and Replacements	
	Replacement Parts	
	General	
	Parts Ordering Procedure	
	Parts Replacement Procedures	
	Removing and Installing a Case Cart Door	
	Overview	
	Removal	
	Installation	
	Lower Door Hinge	
	Overview	
	Tools Required	
	Procedure	
	Casters	
	Overview	
	Tool Required	
	Procedure	
	Latch Striker Plate	
	Overview	
	Tools Required	
	Procedure	
	Handle Catch	
	Overview	
	Tools Required	
	Procedure	
	Knob Handle	
	Latch Bolt	
	Latch Bolt Spring	
	Overview	
	Tool Required	
	Procedure	
	Bumper (Complete with Vinyl Insert)	
	Overview	
	Tools Required	
	Procedure	
		-

Adjustable Shelf	
Overview	
Procedure	
Roll-out Shelf	
Overview	
Procedure	
Roll-out Shelf Track	
Overview	
Procedure	
Rollers for Roll-out Shelves and Tracks	
Overview	
Tools Required	
Procedure	
Care of Wheel/Caster Assemblies	
Overview	
Inspection	
Equipment Frames and Fasteners	
Casters	
Wheels	
Swivel Locks	
Lubrication	
Recommended Lubricants	
Power Towed Operation	

Comments:

Chapter 1 - General Information



Introduction

An SSCI Case Cart is ideal for keeping all the supplies needed for individual procedures close at hand. Simply load it with sterile instruments, surgical packs, surgical drapes, sutures, and other supplies and wheel it to the surgical suite. When the procedure is complete, all items delivered to the surgical suite within the Case Cart are to be repackaged inside the Case Cart for return to the sterile processing department. Then, after washing, quickly and easily restock the Case Cart with sterile instruments, surgical packs, surgical drapes, sutures, and other supplies for the next surgical procedure or emergency.

You will appreciate the exceptional quality of SSCI's stainless steel Case Carts. We start with heavy-gauge, Type 304 stainless steel, formed, heli-arc welded, and then polished to a smooth, even finish. We then incorporate a host of construction features for industrial-strength durability and exceptionally easy care.

SSCI Tote-Al Case Carts can be designed and sized with couplers and signage compatible with all cart transfer and lift systems.

About this Manual

Every attempt has been made to insure that the information in this manual is correct and complete. SSCI, however, always welcomes our customer's suggestions for improvements to our products and associated publications.

Information and Safety Notices	In this manual you will find text under the headings Note: , and CAUTION: .			
Notes	Under Note: headings, you will be given additional information pertinent to the subject discussed in that paragraph or step.			
	Example:			
	it high Note:	ess steel is steel alloyed with chromium to make ly resistant to stain, rust, and corrosion. This does NOT mean, however, that stainless fill <i>never</i> rust or corrode.		
CAUTIONS	hazardous con	ION: headings, you will be alerted to potentially ditions which, if ignored or mishandled, could v to yourself or damage to the equipment.		
	Example:			
	<i>CAUTION:</i> Unpacking the case cart is not difficult. The cart is heavy, however, and handling it can be awkward for one person. We recommend that unpacking be done by at least two people.			
SSCI Contact Information	Contact SSCI Customer Service by mail, telephone, or fax. The department is available from 8:30am to 5:00pm, Central Time, Monday through Friday. Closed holidays.			
	Address:	Suburban Surgical Co., Inc. 275 Twelfth Street Wheeling, Illinois 60090		
	Telephone:	Illinois - (847) 537-9320, ext. 3518 Toll Free - (800) 323-7366		
	Fax:	(847) 537-9061		
	Web:	www.suburbansurgical.com		

There are twelve models of double-door case carts (with center posts) varying by cabinet size and handle options. These carts allow for configuration with shelves on both sides of the center post. When the doors are open, you have full access to the cart's optional shelves. The doors close tightly against the center post to help seal out environmental contaminants.

Cabinet Sizes Case cart cabinets are all 24 in. wide, and either 30 in., 36 in., 42 in., or 48 in. long. Carts are available in two cabinet heights: 33 in. and 48 in.

Handle Options Three handle options are available for your case cart:

- **Style A** Recessed handle, near the top of the case cart for 33 in. high cabinets (Figure 1).
- Style B Recessed handle, spaced down from the top of the case cart - for 48 in. high cabinets (Figure 2).
 - **Style C** External handle, near the top of the case cart for 33 in. high cabinets (Figure 3).



Figure 1. Style A Handles

Models

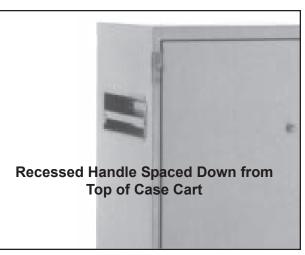


Figure 2. Style B Handles

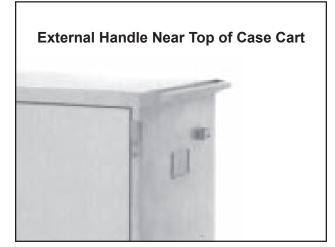


Figure 3. Style C Handles

Model Part Numbers

The SSCI part numbers, handle styles, and dimensions of the twelve double-door case carts (with center posts) are listed in Table 1.

Cart Part	Handle	Cabinet Dimensions			Overall Dimensions		
Number	Style	Length	Width	Height	Length	Width	Height
105495-00	А	30"	24"	33"	33.750"	27.375"	39.375"
105503-00	А	36"	24"	33"	39.750"	27.375"	39.375"
105511-00	А	42"	24"	33"	45.750"	27.375"	39.375"
105519-00	А	48"	24"	33"	51.750"	27.375"	39.375"
105525-00	В	30"	24"	48"	35.750"	27.375"	54.375"
105533-00	В	36"	24"	48"	41.750"	27.375"	54.375"
105541-00	В	42"	24"	48"	47.750"	27.375"	54.375"
105549-00	В	48"	24"	48"	53.750"	27.375"	54.375"
105595-00	С	30"	24"	33"	35.750"	27.375"	39.375"
105603-00	С	36"	24"	33"	41.750"	27.375"	39.375"
105611-00	С	42"	24"	33"	47.750"	27.375"	39.375"
105619-00	С	48"	24"	33"	53.750"	27.375"	39.375"

Table 1. Double-door Case Carts - Parts Numbers and Dimensions

Shelf Options

SSCI provides a variety of shelving options for your case cart. Three types of shelves are available: wire, solid, and perforated. All three types are available in adjustable or roll-out styles. All shelves, both adjustable and roll-out, are adjustable for height. Wire shelves are stainless steel rod, heli-arc welded at all intersections. Solid and perforated shelves are 18-gauge, stainless steel.

Figure 4 shows a case cart with adjustable wire shelves, and Figure 5 shows a cart with roll-out wire shelves.

Part numbers for the various shelf options are shown in Table 2.



Figure 4. Case Cart with Adjustable Wire Shelves



Figure 5. Case Cart with Roll-out Wire Shelves (Rollers Shown in Inset)

Cart Part	Ad	justable Shelv	ves	Roll-out Shelves		
Number	Wire Shelf	Solid Shelf	Perforated Shelf	Wire Shelf	Solid Shelf	Perforated Shelf
105495-00 105525-00 105595-00	220302-00	220312-00	220322-00	220332-00	220342-00	220352-00
105503-00 105533-00 105603-00	220304-00	220314-00	220324-00	220334-00	220344-00	220354-00
105511-00 105541-00 105611-00	220306-00	220316-00	220326-00	220336-00	220346-00	220356-00
105519-00 105549-00 105619-00	220300-00	220310-00	220320-00	220330-00	220340-00	220350-00

Table 2. Double-door Case Carts (with center posts) - Shelf Options Part Numbers

Top Extensions

New double-door case carts can be ordered with extended tops (Figure 6). The extension tops are 18-gauge, stainless steel.

Cart Part Number	Extension Top Part Number
105495-00 105525-00	220401-00
105503-00 105533-00	220402-00
105511-00 105541-00	220403-00
105519-00 105549-00	220400-00
105595-00	220411-00
105603-00	220412-00
105611-00	220413-00
105619-00	220410-00

Table 3. Extension Top Part Numbers



Figure 6. Extended Top

These extensions increase the length of the top by the following amounts, on each end, depending on cabinet length:

1	0 0	
	Cabinet length 30 in	5.125 in.
	Cabinet length 36 in	8.125 in.
	Cabinet length 42 in	11.125 in.
	Cabinet length 48 in	14.125 in.

Accessories

A variety of accessories can be ordered to increase the functionality of your case cart:

Card holders (open on top edge):

5	in.	W x	3	in.	Н-	600013

- 6 in. W x 4 in. H 603673
- 8 in. W x 5 in. H 601495
- Custom-sized card holders available
- 2 digit signage plates -617375
- Sign "THIS END ENTERS LIFT FIRST" 610794
- Sign "OTHER END ENTERS LIFT FIRST" 617525
- Drawers (refer to *Optional Drawers* below)

Optional Drawers Two types of optional drawers are available for the case cart: drawers that mount inside the cart under the top (Figure 7), and drawers that mount under one of the shelves (Figure 8). Drawers are made of ABS or fiberglass reinforced plastic. All runners are stainless steel.

ABS drawers can be ordered ribbed with vertical channels to accommodate divider strips, or non-ribbed. Fiberglass reinforced plastic drawers can be autoclaved to 250° F. constant.

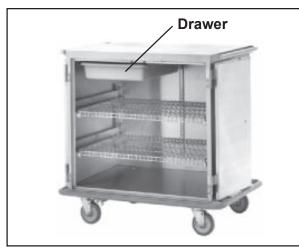


Figure 7. Optional Drawer Mounted Under the Case Cart Top

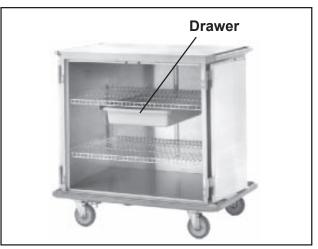


Figure 8. Optional Drawer Mounted Under a Shelf

Drawer Location	ABS	Fiberglass Reinforced Plastic
Under Case Cart Top	220430-240	220435-240
Under Adjustable Wire Shelf	220431-240	220436-240
Under Adjustable Solid & Perforated Shelves	220432-240	220437-240
Under Roll-out Wire Shelf	220433-240	220428-240

 Table 4. Part Numbers for Optional Drawers

Returning the Case Cart for Repairs

RMA Numbers	If your case cart should require return to SSCI for repairs, discuss the problem with one of our Customer Service
	Representatives. Obtain an RMA number (Return Merchandise Authorization) from them before shipping the unit back.
	Note: Merchandise returned without an RMA number will not
	be accepted.

Packing and
ShipmentPackage the case cart securely, and ship documentation with
the cart including:

- Destination
- RMA Number
- Your name, company, and address
- Your telephone number
- A description of the reason for returning the cart

Warranty

Suburban Surgical Company, Inc. warrants the original purchaser that all equipment manufactured by Suburban Surgical Company, Inc. will be of the highest standards in material and workmanship. All equipment manufactured by Suburban Surgical Company, Inc. will be warrantied for a period of one (1) year from the date of shipment from the factory.


Components and casters Suburban Surgical Company, Inc. purchases from other manufacturers will be covered by the respective manufacturer's Warranty.

Warranties will not apply if it is determined by Suburban Surgical Company, Inc. that the equipment became defective due to an accident, misuse, abuse, or alteration. Warranties do not include freight charges for replacement or repair.

Chapter 2 - Unpacking and Assembly

General	option proble	Case Carts are shipped fully assembled except for nal shelves which must be installed on-site. If you have ems or require additional assistance, please feel free to SCI Customer Service at (800) 323-7366.			
Unpacking and Inspection	The o awky	<i>CAUTION:</i> Unpacking the case cart is not difficult. The cart is heavy, however, and handling it can be awkward for one person. We recommend that unpacking be done by at least two people.			
	the sh	shipping container appears damaged in any way, contact hipping company immediately. Save all damaged packing hials to assist in proving liability for damage.			
	dama	Fully inspect your case cart while you unpack it. If any ge is noted, or if parts appear to be missing, call SSCI omer Service at (800) 323-7366.			
Shelf Installation	Wire, solid, and perforated shelves are all installed in the same way. There are differences, however, in the installation procedures for adjustable and roll-out shelves.				
Adjustable Shelves	rear s down flange move shelf (Figur A ser three	rve the shelf (Figure 9) and notice that on the front and helf rods, the left end is straight and the right end is bent at a 90° angle. Also note that the rear of the shelf is ed up (to keep items from falling off when the shelf is d), and the front is flanged <i>down</i> . Notice also, vertical brackets mounted to each inside corner of the cart re 10), in the center of the back wall, and on the center post. ies of oblong holes in the vertical brackets are spaced about inches apart. The ends of the shelf rods fit into these holes. stall adjustable shelves:			
	1.	Open the case cart door.			
	2.	Put the shelf into the cabinet (flanged-up side to the rear) with the right side tilted up at about a 30° angle.			
	3.	Place the straight (left) rod ends into the holes in the left front and rear vertical brackets at the desired level			

Chapter 2 - Unpacking and Assembly

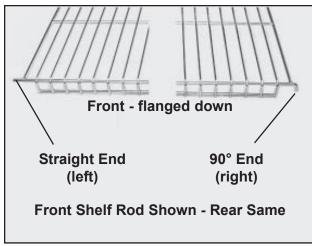



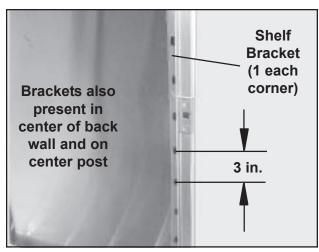


Figure 10. Shelf Bracket

4. Lower the 90° ends (right) and engage rod ends into the right vertical bracket holes. **Note:** Make sure the shelf is level side-to-side and front-to-rear.

Roll-out Shelves Mounting a roll-out shelf is a two-step procedure: (1) mounting the two roll-out shelf tracks, and (2) installing the shelf.

Notice the vertical shelf brackets mounted to each inside corner of the cart (Figure 10), in the center of the back wall, and on the center post. A series of oblong holes in the vertical brackets are spaced about three inches apart. The hooks on the roll-out shelf tracks fit into these holes. To install roll-out shelves:

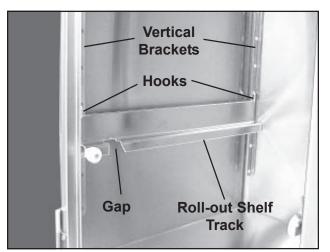


Figure 11. Roll-out Shelf Track and Vertical Brackets

- 1. Open the case cart door.
- 2. Make sure that the shelf lock is pivoted up to the release position (Figure 14).
- 3. Hook both roll-out shelf tracks to the front and rear vertical brackets at the desired level (Figure 11). **Note**: Make sure that the gaps in the roll-out shelf tracks are to the front.
- 4. Tilt the front of the shelf upward and insert the rear edge into the cabinet.
- 5. Slide the lower rollers down through the gaps in the roll-out shelf tracks.

- 6. Lower the front of the shelf to near horizontal.
- 7. When all rollers are properly positioned, roll the shelf back into the cabinet.
- 8. Slide the shelf back and forth a few times to make sure it operates smoothly.
- 9. Slide the shelf all the way into the cabinet.
- 10. Pivot the shelf lock down to the lock position (Figure 15).
- 11. Close the door.

Comments:

Chapter 3 - Using Your Case Cart

Opening, Latching, and Closing the Doors

Opening the Door

To open the door, push the knob handle down (Figure 12) and swing the door open.

Latching the Door in the Full-open Position

The door can be opened a full 270° to lie flat against the side of the cart and can be latched in that position for greater convenience when loading or cleaning. When latched, the knob handle engages either a catch on the side of the cart (Figure 13) or the recessed handle (depending on case cart model) and is held in the full-open position.

Unlatching the Door from the Full-open Position

Press down on the latch tongue (Figure 13) and pull the door free of the catch (or recessed handle).

Closing the Door

The door can be pushed closed and will lock. It may be easier, however, to press the knob handle down and then push the door closed.

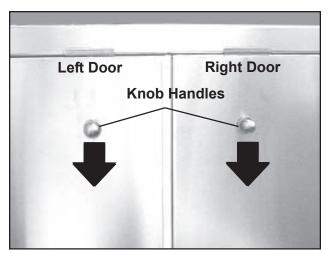


Figure 12. Opening the Doors

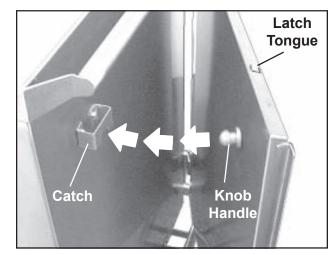


Figure 13. Latching a Door in the Fullopen Position

Using Roll-out Shelves

Locking and Releasing Roll-out Shelves The following information is valid for wire, solid, and perforated shelves.

Roll-out shelves have a built-in lock to hold them securely in place so that they do not roll out of the cabinet when not intended. A two-position pivot lock located on the front of the shelf on the right side holds the shelves in place, or releases them when required. Pivot the lock up to release the shelf (Figure 14), or down to lock it (Figure 15).

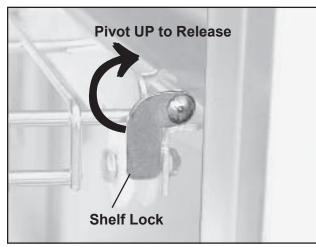


Figure 14. Shelf Lock in Lock Position

Rolling Shelves In and Out



Figure 15. Shelf Lock in Release Position

Roll-out shelves ride on polyethylene rollers and, when rolled out, extend 14.75 in. past the cart's face to a positive stop preventing accidental removal. The rear edge of each shelf is flanged up to prevent stored items from falling off the back as the shelf is rolled out.

Before attempting to roll the shelf out, pivot the shelf lock upward to the release position (Figure 14). After rolling the shelf back into the cabinet, be sure to pivot the shelf lock down to the lock position (Figure 15).

Removing and Replacing Roll-out Shelves

It will occasionally be necessary to remove a roll-out shelf for cleaning, height adjustment, etc.

Removal

- 1. Open both cabinet doors and latch them back (Figure 13).
- 2. Pivot the shelf lock up to the release position (Figure 14).

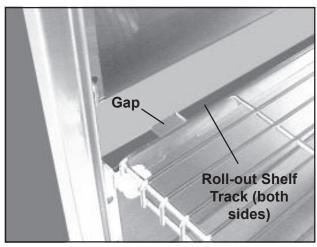


Figure 16. Roll-out Shelf Track

Note: The shelf rollers ride on a roll-out shelf track on either side of the cabinet. Notice that on each track there is a 1.25 in. gap about 2.5 in. back from the front end (Figure 16).

- 3. Roll the shelf out until the front lower rollers approach the gaps.
- 4. Tilt the shelf up and pull it outward, allowing the lower rollers to come out through the gaps.
- 5. Remove the shelf from the cabinet.

Replacement


- 1. Tilt the front of the shelf upward and insert the rear edge into the cabinet.
- 2. Slide the lower rollers through the gaps in the roll-out shelf tracks.
- 3. Lower the front of the shelf to horizontal.
- 4. When all rollers are properly positioned, roll the shelf back into the cabinet.
- 5. Slide the shelf back and forth a few times to make sure it operates smoothly.
- 6. Slide the shelf all the way into the cabinet.
- 7. Pivot the shelf lock down to the lock position (Figure 15).
- 8. Close the door.

Adjusting Shelf Height


Adjustment points are provided in the case cart to allow you to adjust the shelves up and down to suite your needs. Shelf positions are spaced about 3 in. apart, and the number of positions varies with the height of the cabinet. Both adjustable and roll-out shelves can be adjusted for height.

Adjustable Shelves

Observe the shelf (Figure 17) and notice that on the front and rear shelf rods, one end is straight and the opposite end is bent down at a 90° angle. Notice also, vertical shelf brackets mounted to each inside corner of the cart (Figure 18), in the center of the back wall, and on the center post. A series of oblong holes in the vertical brackets are spaced about three inches apart. The ends of the shelf rods fit into these holes.

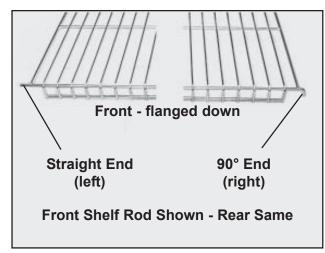



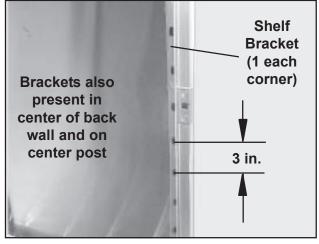



To move a shelf to a different level:

- 1. Lift up on the side of the shelf with the 90° rod ends until you can remove the straight rod ends from the bracket holes.
- 2. Place the straight ends into the holes at the desired level.
- 3. Lower the 90° ends and engage rod ends into the new holes. **Note:** Make sure the shelf is level side-to-side and front-to-rear.

Roll-out Shelves Altering the height of a roll-out shelf requires removal of the shelf from the cabinet. To alter the shelf height:

1. Remove the shelf from the cabinet (refer to *Removing and Replacing Roll-out Shelves - Removal, Steps 1* through 5, starting on *Page 14*).

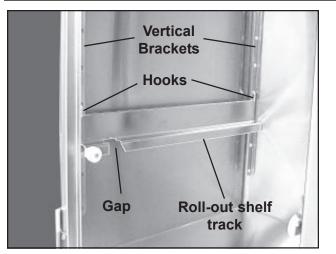


Figure 19. Roll-out Shelf Track and Vertical Brackets

- 2. Lift up on the roll-out shelf track and unhook it from the front and rear vertical brackets (Figure 19). Do this for both roll-out shelf tracks.
- 3. Hook both roll-out shelf tracks to the front and rear vertical brackets at the desired level.
- 4. Replace the shelf onto the roll-out shelf tracks (refer to *Removing and Replacing Roll-out Shelves - Replacement, Steps 1* through 8 on *Page 15*). **Note:** Make sure the shelf is level side-to-side and front-to-rear.

Removing and Replacing Shelves	It may occasionally be necessary to remove a shelf for cleaning, height adjustment, etc. Removing and replacing the case cart shelves are simple and easy.
Adjustable Shelves	To remove and replace an adjustable shelf, follow the instructions under <i>Adjusting Shelf Height - Adjustable Shelves</i> on <i>Page 16</i> .
Roll-out Shelves	To remove and replace a roll-out shelf, follow the instructions under <i>Removing and Replacing Roll-out Shelves - Removal, Steps 1</i> through <i>5</i> , starting on <i>Page 14</i> .
Using the Caster Swivel Locks	Two of the four casters on each case cart are equipped with swivel locks to insure that the case cart runs straight without turning. The casters with swivel locks are located on diagonally

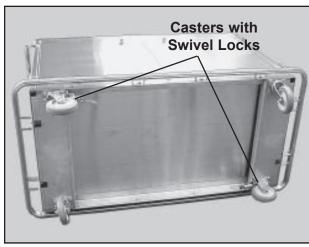


Figure 20. Typical Case Cart

Locking the Swivel

To lock the swivel and prevent the caster from turning, place the swivel lock (Figure 21) in the straight-out position. In this position, the end of the lock enters a notch in the swivel body and prevents it from turning.

opposite corners of the cart (Figure 20).

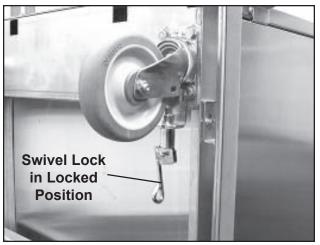


Figure 21. Caster with Swivel Lock - Locked

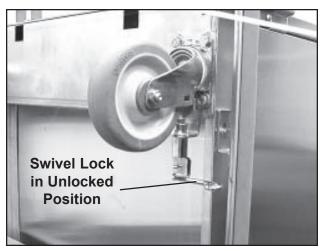


Figure 22. Caster with Swivel Lock - Unlocked

Unlocking the Swivel

To unlock the swivel and allow the caster to turn, place the swivel handle in the 90° position (Figure 22).

Chapter 4 - Repairs and Replacements

Replacement Parts

Table 5 lists the replacement parts available for the case cart. For parts not listed below, contact SSCI Customer Service at (800) 323-7366. Refer to *Parts Ordering Procedure* on *Page 21*.

Part Name	SSCI Part Number	Quantity	Replacement Instructions	
Lower Door Hinge	603485	4	Page 23	
Caster, w/ Swivel Lock	C001-31011110-FAA00	2	Page 24	
Caster, w/o Swivel Lock	C001-21011110-FAA00	2	Page 24	
Latch Striker Plate	608088	2	Page 25	
Handle Catch	On Case Carts with Handle Styles B & C (<i>Page 3</i>) - 616380	2	Page 26	
Knob Handle	202499	2	Page 27	
Latch Bolt	751549	2	Page 27	
Latch Bolt Spring	852406	2	Page 27	
Bumper, Complete	Refer to Table 6 on Page 20	1	Page 28	
Adjustable Wire Shelf				
Adjustable Solid Shelf	Refer to Table 7 on Page 20	can vary	Page 29	
Adjustable Perforated Shelf				
Roll-out Wire Shelf				
Roll-out Solid Shelf	Refer to Table 7 on Page 20	can vary	Page 29	
Roll-out Perforated Shelf]			
Roll-out Shelf Track	Left - 210007 Right - 210008	1 each/Shelf	Page 29	
Rollers for Shelf & Track	Shelf & TrackRefer to Figure 23 on Page 21		Page 30	

Table 5. Replacement Parts for SSCI Double-door Case Carts (with center posts)

Cart Part Number	Bumper Assy P/N		
105495-00	205048		
105503-00	203074		
105511-00	205369		
105519-00	207077		
105525-00	205048E		
105533-00	203074E		
105541-00	205369E		
105549-00	203077E		
105595-00	205048E		
105603-00	203074E		
105611-00	205369E		
105619-00	203077E		

Table 6. Replacement Bumpers - Double-door C	ase
Carts (with center posts)	

Cart Part	Adjustable Shelves			Roll-out Shelves		
Number	Wire Shelf	Solid Shelf	Perforated Shelf	Wire Shelf	Solid Shelf	Perforated Shelf
105495-00 105525-00 105595-00	220302-00	220312-00	220322-00	220332-00	220342-00	220352-00
105503-00 105533-00 105603-00	220304-00	220314-00	220324-00	220334-00	220344-00	220354-00
105511-00 105541-00 105611-00	220306-00	220316-00	220326-00	220336-00	220346-00	220356-00
105519-00 105549-00 105619-00	220300-00	220310-00	220320-00	220330-00	220340-00	220350-00

 Table 7. Replacement Shelves - Double-door Case Carts (with center posts)

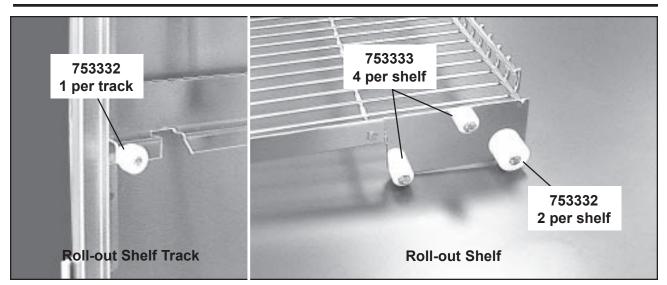


Figure 23. Part Numbers for Rollers on Roll-out Tracks and Shelves

General

Parts Ordering Procedure

 Many threaded fasteners used on SSCI products are secured with thread adhesive to insure structural integrity. Removing any screw or bolt may be difficult at first.

- If during disassembly, you remove any tape, cable ties, etc., remember to replace them when the installation is complete.
- During disassembly, retain all hardware items such as screws, nuts, lockwashers, etc. for reassembly.
- If you have problems with any procedure, please feel free to call SSCI Customer Service at (800) 323-7366.

Order new equipment, accessories, and replacement parts direct from SSCI. You can order by mail, telephone, or fax. Refer to *SSCI Contact Information* on *Page 2* for address, telephone, and fax numbers. When ordering, please provide the following information:

- Your name
- Company name
- Company account number
- Telephone number
- Fax number
- e-mail address
- Shipping address
- Billing address (if different from shipping address)
- Names, part numbers, and quantities of items being ordered
- Credit card number and expiration date, or other payment information
- Preferred method of shipment
 - Information on whether the items are required on a normal or urgent basis

Parts Replacement Procedures

Removing and Installing a Case Cart Door

Overview

Replacement of some case cart parts will require the removal and subsequent reinstallation of a case cart door.

CAUTION: When working on the case cart, make sure the wheels are blocked so that the cart cannot move while you are working. Such movement could create a hazardous condition.

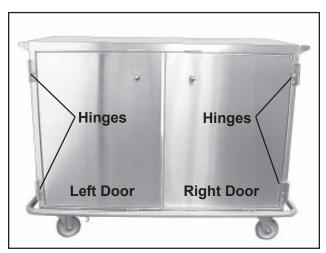


Figure 24. Door Hinges

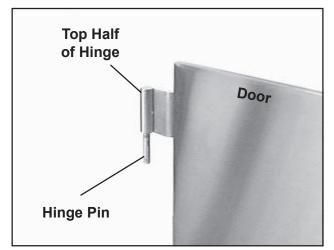


Figure 25. Top Half of Door Hinge

Removal

- 1. Block or otherwise immobilize the case cart wheels so that the cart can't move while you are working on it.
- 2. Unlatch and open the door.

CAUTION: The case cart door is heavy and we recommend that removing and installing the door be done by at least two people.

3. Lift up on the door until the upper and lower hinge pins on the door disengage from the lower hinge halves (Figures 25 and 25) and remove the door.

Installation

- 1. Lift up the door and gently lower both hinge pins into the lower hinge halves (Figure 25). Make sure the hinge pins seat fully into the lower halves.
- 2. Swing the door open and closed a few times to make sure it moves easily.
- 3. Close and latch the door.

Lower Door Hinge Overview

P/N 603485

On all double-door case cart doors, each of the two hinges has an upper and a lower half. The upper half is integral to the door itself and cannot be replaced short of replacing the complete door. The lower half is bolted to the case cart and can be replaced if necessary. All hinges, upper and lower, on all double-door case carts are identical.

Tools Required

- Phillips screwdriver
- Socket wrench, 7/16 in. socket, and 3 in. extension

Procedure

- Remove the case cart door. Refer to *Removing and Installing a Case Cart Door - Removal, Steps 1* through 3 on *Page 22*. Observe the **Cautions** shown in the procedure.
- 2. With a Phillips screwdriver and a socket wrench with a 7/16 in. socket on a 3 in. extension, remove the two hinge mounting screws and nuts (Figure 26), and remove the hinge.

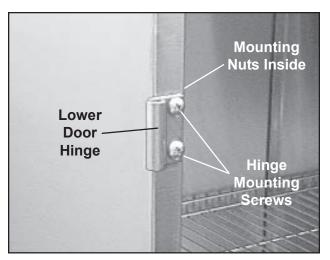


Figure 26. Lower Door Hinge and Mounting Screws and Nuts

- 3. Hold the new hinge in place and secure with the two mounting screws/nuts.
- 4. Replace the case cart door. Refer to *Removing and Installing a Case Cart Door Installation, Steps 1* through 3 on *Page 22*.

Casters

w/ Swivel Lock -P/N C001-31011110-FAA00 w/o Swivel Lock -P/N C001-21011110-FAA00

Overview

All casters, either with or without swivel locks, are removed and installed the same way.

Tool Required

1/2 in. wrench

Procedure

1. Make sure that the door is closed and latched.

CAUTION: The case cart is heavy. We recommend that laying it down be done by at least two people.

- 2. Lay the case cart down on one side so that the caster being removed is on top.
- 3. With a 1/2 in. wrench, remove the four mounting screws/washers on the caster base (Figure 27).
- 4. Lift the complete caster assembly off the case cart.
- 5. Using the same screws/washers, mount the new caster to the bottom of the case cart.
- 6. Stand the case cart back up to the upright position.

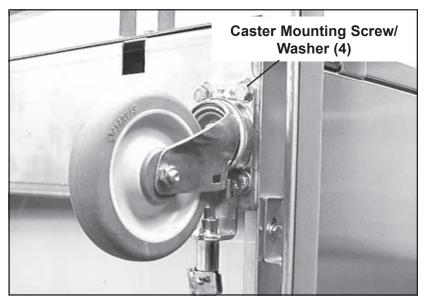


Figure 27. Caster Mounting Screws (4)

Latch Striker Plate Overview

P/N 608088


All double-door case carts have two striker plates. They are all identical and are all removed and installed in the same way.

Tools Required

- Flat blade screwdriver
- \blacksquare 3/8 in. open-end or box-end wrench

Procedure

- 1. Unlatch and open the door.
- 2. With a flat blade screwdriver and a 3/8 in. open-end or box-end wrench, remove the two striker plate mounting screws and nuts (Figure 28), and remove the striker plate.
- 3. Hold the new striker plate in place and secure with the two mounting screws/nuts.

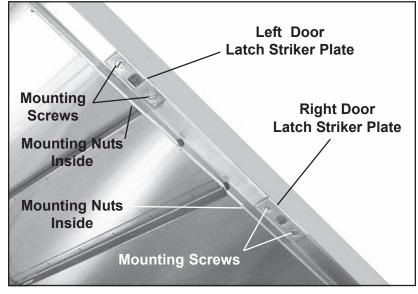

4. Close and latch the door.

Figure 28. Striker Plates and Mounting Screws

Handle Catch

P/N 616380 -(Only on Case Carts with Handle Styles B and C)

Overview

Double-door case carts with handle styles B and C have these handle catches. There is one for each door, and both are removed and installed in the same way.

Tools Required

- \blacksquare 3/8 in. wrench
- Phillips screwdriver

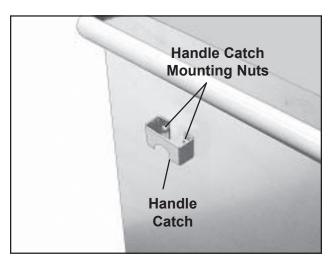


Figure 29. Handle Catch on Side of Case Cart (left side shown)

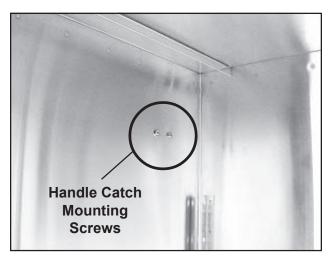


Figure 30. Handle Catch Mounting Screws Inside Case Cart (left side shown)

Procedure

Note: If you do not remove the case cart door, it will require two people to perform this procedure due to the difficulty of reaching the mounting nuts and screws at the same time.

- Optional: Remove the case cart door. (Refer to Note above.) Refer to *Removing and Installing a Case Cart Door - Removal, Steps 1* through 3 on *Page 22*. Observe the Cautions shown in the procedure.
- 2. With a 3/8 in. wrench and a Phillips screwdriver, remove the two mounting screws/nuts on the handle catch (Figures 29 and 30), and lift off the catch.
- 3. Mount the new latch handle to the case cart with the screws/nuts removed above.
- 4. If you removed it, replace the door. Refer to *Removing and Installing a Case Cart Door - Installation, Steps 1* through 3 on *Page 22*.
- 5. Try latching and unlatching the door several times to make sure it works.

Owner's Manual - Tote-Al Case Carts - Double-door Models (with center posts)

Knob Handle
P/N 202499Overview
The knob handle, latch bolt, and latch bolt spring are closely
related parts. The knob handle can be replaced by itself.
Replacing the latch bolt requires removal of the knob handle.
Replacing the latch bolt spring requires removal of the latch bolt.P/N 751549Tool Required

Latch Bolt Spring P/N 852406

Pliers

Procedure *CAUTION:* When using the pliers to loosen or tighten the knob handle, try not to scratch or mar the handle.

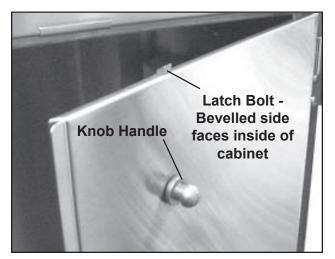


Figure 31. Knob Handle and Latch Bolt

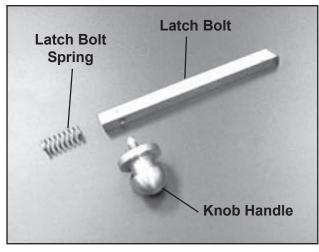


Figure 32. Latch Parts

- 1. With a pliers, unscrew the knob handle from the door (Figure 31). If not replacing the bolt or spring, proceed to *Step 7*.
- 2. Note the position of the angled end of the latch bolt. Grasp the bolt and pull it out of the door. If not replacing the spring, proceed to *Step 6*.
- 3. If replacing the spring, remove the door from the case cart. Refer to *Removing and Installing a Case Cart Door -Removal, Steps 1* through 3 on *Page 22*. Observe the **Cautions** shown in the procedure.
- 4. Hold the door so that the hole from which the latch bolt was removed is down, and allow the spring to fall out (Figure 32).
- 5. Hold the door so that the hole from which the latch bolt was removed is up, and drop the new spring into the hole.
- 6. Insert the new or existing latch bolt (as appropriate) into the hole. Make sure the bevelled side faces the inside of the cabinet.

- 7. Screw the new or existing knob handle (as appropriate) into the latch bolt and tighten with a pliers.
- If the door was removed from the case cart reinstall it 8. now. Refer to *Removing and Installing a Case Cart* Door - Installation, Steps 1 through 3 on Page 22.

Bumper (Complete with Vinyl Insert) **Refer to Table 6 for** Part Numbers

Overview

This is the complete bumper assembly including the vinyl insert. All double-door bumper assemblies are the same except that the dimensions vary to suit the dimensions of the various size case carts.

Tools Required

Two 7/16 in. wrenches

Procedure

CAUTION: The case cart is heavy. We recommend that tilting it over be done by at least two people.

1. Tilt the case cart over on one side, and block up the lower end so that the bumper is off the floor.

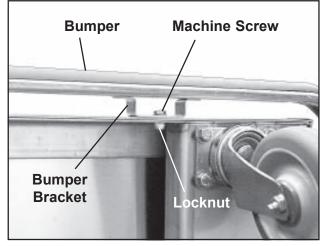


Figure 33. Bumper, Bracket, and **Mounting Hardware**

- machine screws and locknuts from all bumper bracket positions (Figure 33).
- 3. Remove the old bumper from the case cart.
- 4. Place the new bumper in place on the cart.
- 5. Using the machine screws and locknuts removed above, mount the new bumper to the cart.
- 6. Remove the block from under the case cart, and return the cart to the upright position.

2. With two 7/16 in, wrenches remove the

Adjustable Shelf

Wire - P/N 220300-00 Solid - P/N 220310-00 Perforated - P/N 220320-00

Overview

All adjustable shelves, wire, solid, and perforated, are removed and installed in the same way.

Procedure

Refer to *Adjustable Shelves* on *Page 16*, and use the procedure given there for moving a shelf.

Roll-out Shelf Wire - P/N 220330-00 Solid - P/N 220340-00 Perforated - P/N 220350-00

Overview

All roll-out shelves, wire, solid, and perforated, are removed and installed in the same way.

Procedure

Refer to *Using Roll-out Shelves - Removing and Replacing Roll-out Shelves* on *Page 14*, and use the procedure given there.

Roll-out Shelf Track

Left - P/N 210007 Right - P/N 210008

Overview

Left and right roll-out shelf tracks are removed and installed the same way.

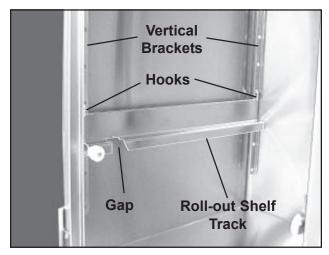


Figure 34. Roll-out Shelf Track and Vertical Brackets

Procedure

- 1. Remove the shelf from the cabinet (refer to *Removing and Replacing Roll-out Shelves - Removal, Steps 1* through 5, starting on *Page 14*).
- 2. Lift up on the roll-out shelf track and unhook it from the front and rear vertical brackets (Figure 34).
- 3. Hook the new track to the vertical brackets.
- 4. Replace the shelf onto the shelf tracks (refer to *Removing and Replacing Roll-out Shelves - Replacement, Steps 1* through 8 on *Page 15*). **Note:** Make sure the shelf is level side-to-side and front-to-rear.

Rollers for Roll-out Shelves and Tracks

Large, Grooved Rollers -P/N 753332 Small, Smooth Rollers -P/N 753333

Overview

Each roll-out shelf track has one large, grooved roller. Each roll-out shelf has two large, grooved rollers, and four small, smooth rollers. All large, grooved rollers are the same, and all small, smooth rollers are the same. All rollers are removed and replaced in the same way.

Tools Required

Two 7/16 in. wrenches

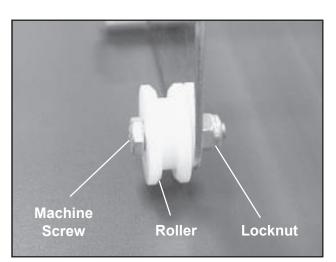


Figure 35. Roller Machine Screw and Locknut

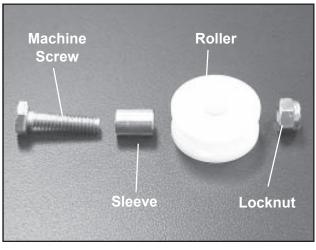


Figure 36. Roller and Sleeve

Procedure

- 1. Remove the shelf from the cabinet (refer to *Removing and Replacing Roll-out Shelves - Removal, Steps 1* through 5, starting on *Page 14*).
- 2. If replacing a roller on the roll-out shelf track, lift up on the track and unhook it from the front and rear vertical brackets (Figure 34).
- 3. Locate the roller you wish to replace. With two 7/16 in. wrenches, remove the machine screw and locknut that hold the roller in place, and remove the roller from the shelf or track, as appropriate (Figure 35).
- 4. Remove the sleeve and discard the old roller.
- 5. Install the sleeve into the new roller (Figure 36).
- 6. Mount the new roller/sleeve and secure it with the machine screw/locknut removed earlier.
- 7. If it was removed, hook the track to the vertical brackets.
- 8. Replace the shelf onto the shelf tracks (refer to *Removing and Replacing Roll-out Shelves Replacement, Steps 1* through 8 on *Page 15*).

Care of Wheel/Caster Assemblies

Overview

The wheel/caster assemblies on the case carts were selected by SSCI for high durability and long life. Two of the casters on each transport cage are equipped with swivel locks. Users are responsible for the proper operation, care, and maintenance of their equipment. Equipment can become damaged and unsafe if abused or subjected to improper demands. If your equipment is regularly maintained and never abused, you will get the maximum safety and service from your casters.

- Never overload the case cart.
- Do not drop heavy loads on the case cart.
 - Do not use the transport cart at high speeds.

The above conditions can create severe impact and shock loads on your case cart and may result in caster, wheel, or equipment failure.

Inspection Equipment Frames and Fasteners

Periodically examine the case cart and check the following:

- Look for broken welds on the case cart.
- Tighten any loose nuts and bolts.
- Look for distortion of the cart caused by overload and impacts. Distorted carts can lead to wheel failure by placing disproportionate loads on one or two casters.
- Make sure the casters are not bent and the mounting bolts are securely fastened.

Casters

Check the swivel assembly on each caster for excessive play due to wear. If the swivel is loose, replace the caster. If the swivel does not turn freely, check for corrosion or dirt binding the raceways. Make sure the swivel nut and wheel axle nuts are tight. If a caster is not operating properly, disassemble, clean, and lubricate it. If this does not fix the problem, replace the assembly (refer to *Casters* on *Page 24*).

Wheels

Check each wheel for excessive or uneven tread wear, or badly worn or "chunked out" rubber tires. Such conditions can cause erratic steering, bumping, load shifting, and damage to floors. If a wheel binds and no longer rolls freely, or if flat spots appear on the tire, carefully inspect the wheel/caster assembly for damage or accumulated foreign matter (dirt, string, animal hair, etc.). If necessary, replace the assembly (refer to *Casters* on *Page 24*).

Swivel Locks

Check swivel locks for proper operation. Apply lock one at a time and attempt to move the equipment to make sure that each lock is not slipping or loose.

If locks slip due to worn or damaged wheels, replace the wheels immediately and retest the brakes. If the lock mechanism itself is not operating properly, repair or replace it. Before returning the equipment to use, always retest the locks.

Lubrication Caster and wheel lubrication is essential. The lubrication schedule depends on your specific application. Normal conditions warrant lubrication every six months, however, for wet or corrosive applications, monthly lubrication may be necessary.

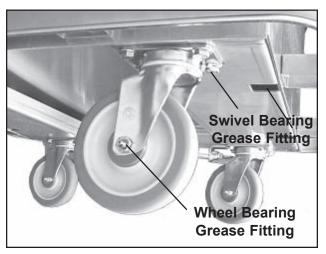


Figure 37. Wheel/Caster Assembly Grease Fittings

Lubrication may also be required after each piece of equipment is washed. Special hightemperature, water-resistant lubricants may be used for these applications. If necessary, SSCI can provide stainless steel casters that require less maintenance.

The wheel/caster assemblies have two grease fittings (Figure 37), one for the wheel and one for the swivel. Use enough grease to fill the bearing, but not so much that it oozes out of the grease seal. After applying the grease, turn the wheel or swivel several times in both directions to distribute the grease evenly.

Recommended SSCI recommends that you use either of the following greases Lubricants when lubricating your case cart casters: Citgo EP-1 Exxon Beacon EP 1 Based on available information, these products are not expected to produce adverse effects on health when used for the intended application and the recommendations provided in the Material Safety Data Sheets (MSDS) are followed. MSDS's are available via the Internet. **Power Towed** Power drawn equipment such as in a tow line or mechanically moved by conveyor will require casters, wheels, and bearings Operation specifically designed for this use. Please consult the factory for caster recommendations of each specific towing or power

drawn equipment application.

SSCI - Suburban Surgical Company, Inc.

Inside back cover

This page left blank intentionally

For more information on SSCI's fine line of products and accessories, talk to your SSCI sales representative.



Suburban Surgical Company, Inc.275 Twelfth StreetWheeling, IL 60090Phone: (847) 537-9320Fax: (847) 537-9061Toll Free: (800) 323-7366Web: www.suburbansurgical.com