

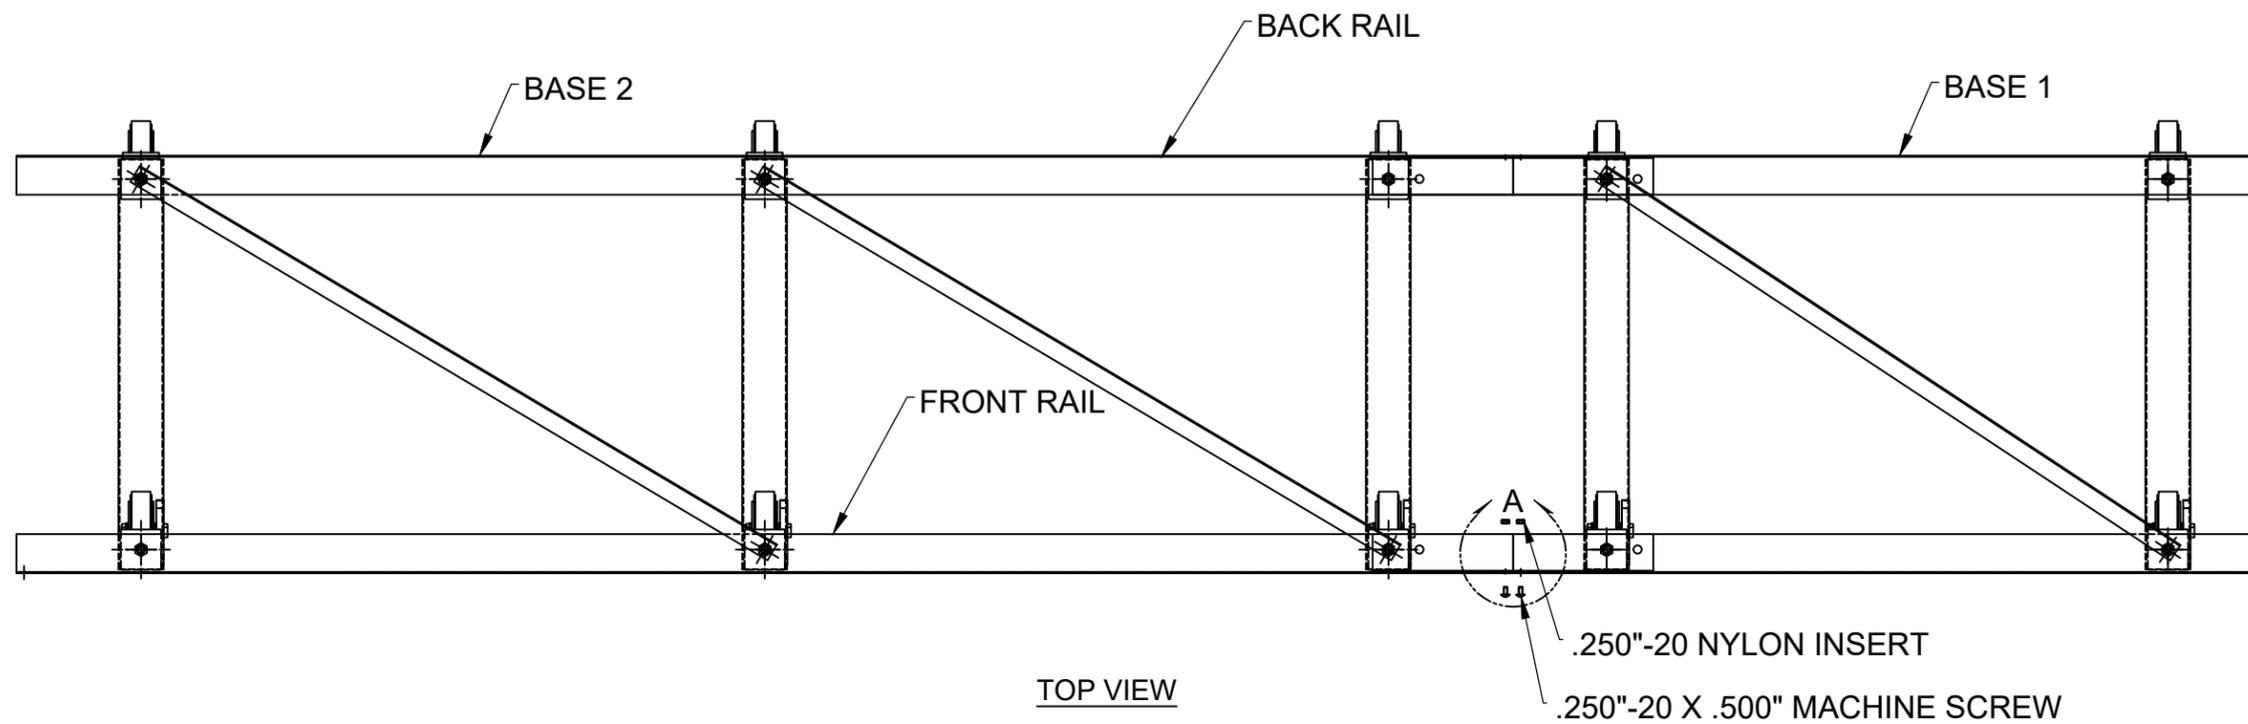


REV	DESCRIPTION	DATE	BY	REL
A	INITIAL DRAWING RELEASE	08-02-16	AK	PV
B	UP TO CURRENT STANDARDS	10-29-24	JD	JD

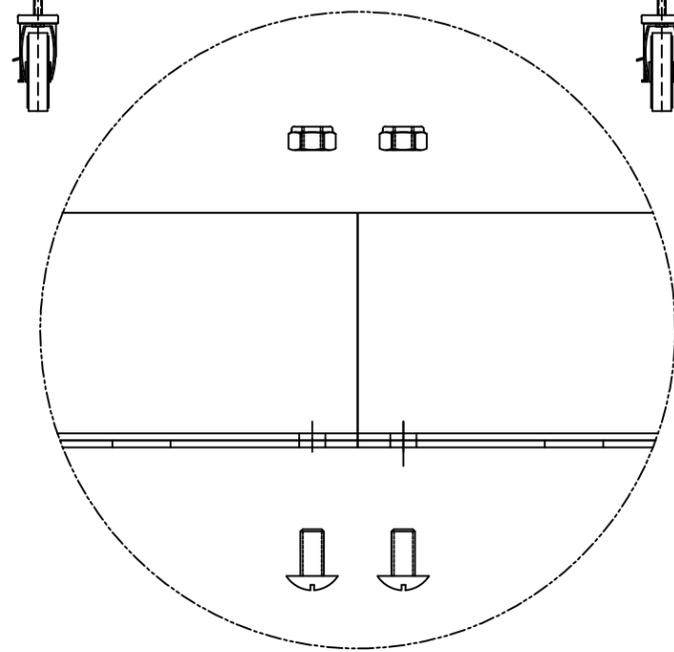

ASSEMBLY INSTRUCTIONS FOR YOUR CAGE ARRANGEMENT

- STEP#1 CONNECT FRONT AND BACK RAILS OF BASE 1 AND BASE 2 USING SS CONNECTOR, .250"-20 X .500" MACHINE SCREWS AND .250"-20 NYLON INSERTS (SEE DETAIL A).
- STEP#2 ASSEMBLE CROSS BRACES, CROSSMEMBERS AND CASTERS TO BASES USING NUTS PER BASE INSTRUCTIONS.
- STEP#3 ENSURING BASE IS CENTERED, TIGHTEN ALL LOOSE SCREWS TO BASE.

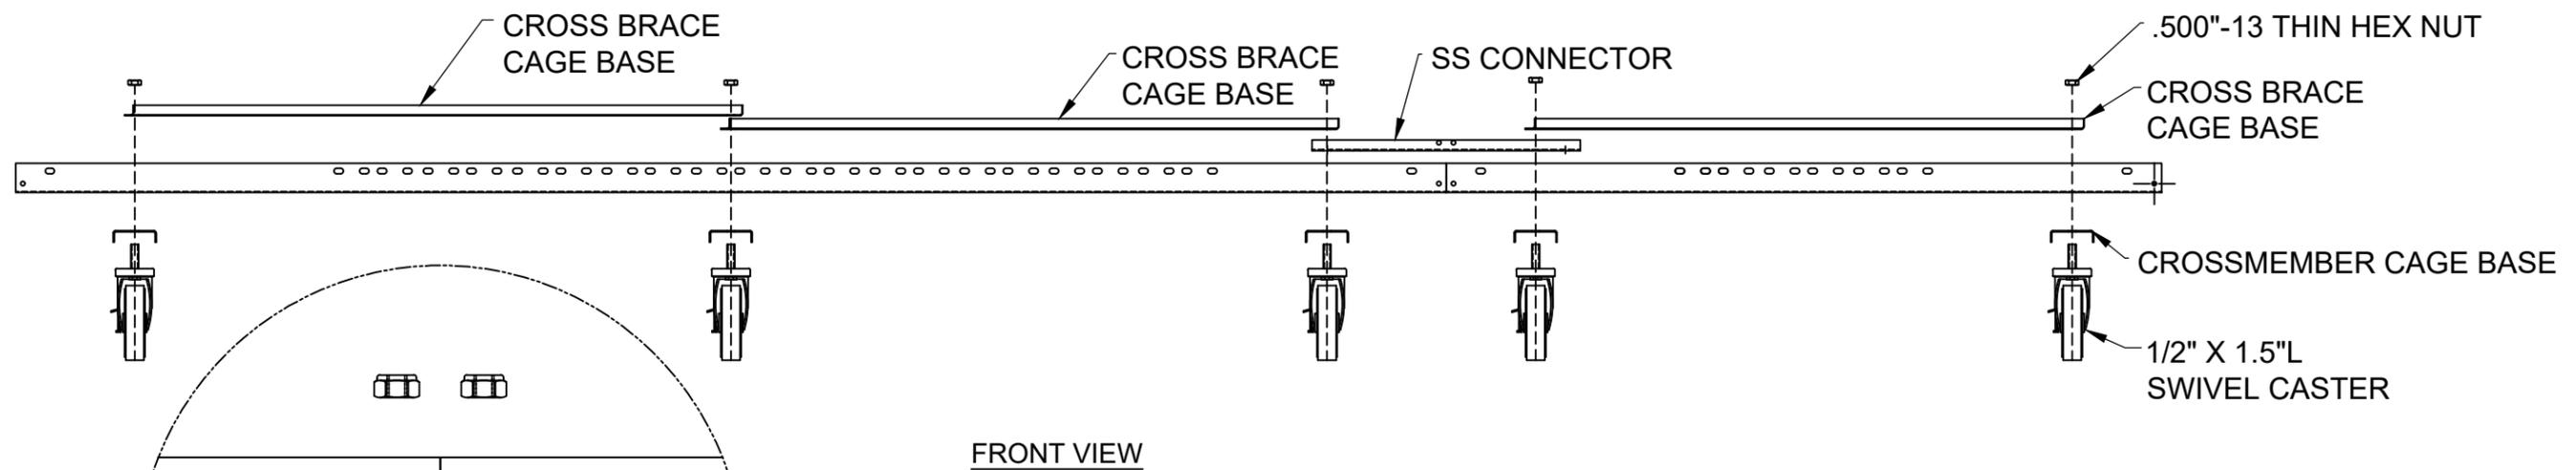

DETAIL A
SCALE 1:2

 SUBURBAN SURGICAL CO., INC. 275 12TH STREET WHEELING, ILLINOIS 60090	INSTRUCTION SHEET 12107-00-BJAEAH SS MOBILE BASE CONNECTOR		
	MATERIAL: N/A	FINISH: N/A	WIRE BLANK SIZE: N/A
SCALE: 1/12	SIZE: B	DRAWING/PART 702793	PIN DIA. N/A REV B