


# SWINGING GATES WITH STAINLESS STEEL GRILL FOR ALL TOTAL PEN SYSTEMS

SFF  
SRF  
MFF  
MRF

Our exclusive features ensure your Total Animal Pen System Gates will operate smoothly for years to come. Stainless steel grill is welded at all contact points to eliminate racking, shifting and rattling. Fully welded design prevents fluids from seeping into frame to make our Pen Systems the most sanitary pens you can buy.

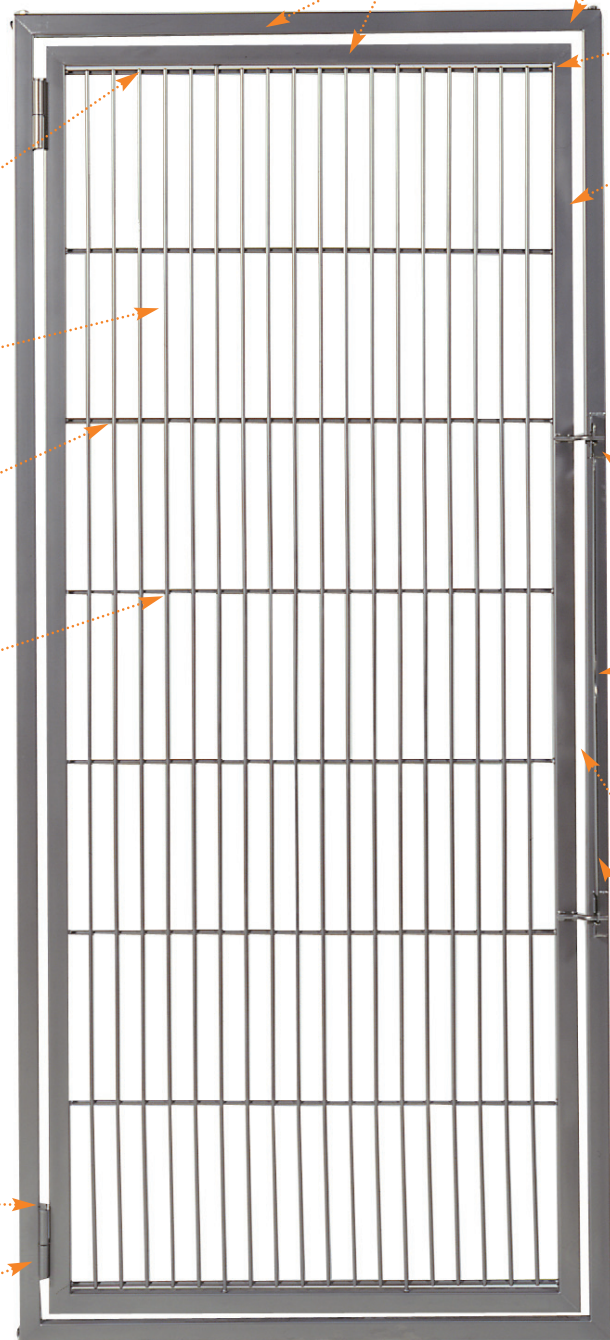

## Frame

Gate jamb and frame are made of 18-gauge-1.25-in. (3.17cm) square Type 304 stainless steel tubing with uniform, non-glare finish.

All corners have weldnut welded to the inside of the tubing to allow you to disassemble and reassemble pens without loss of structural integrity.

Mitered corners and heli-arc welded joints on gate jamb and frame seal out fluids and debris.

Gate features a uniform, non-glare, easy-to-clean finish.

## Grill

Grill is fully circumference welded to the tubular frame at all contact points to eliminate shifting, racking and rattling, and prevent fluids from entering the frame.

Vertical spokes are made of .2375-in. (.603cm) diameter stainless steel.

Crossmembers are made of .312-in. (.792cm) diameter stainless steel.

Stainless steel vertical spokes and crossmembers are welded together at every intersection.

## Latch

Heavy 12-gauge stainless steel latch brackets are adjustable for smooth, secure operation.

Heavy 12-gauge stainless steel latch connector secures the gate at two point 31-in. (78.74cm). More secure than gates with only one latch in the center.

Latch connector disassembles easily for cleaning and adjustments.

Latch connector is designed to accommodate a padlock for extra safety.

## Hinges

Stainless steel .3125-in. diameter (.79cm) hinge pins remove easily for simple maintenance if necessary.

Durable heavy 12-gauge stainless steel barrel hinges are welded to the swinging gate jamb and frame for smooth operation.